


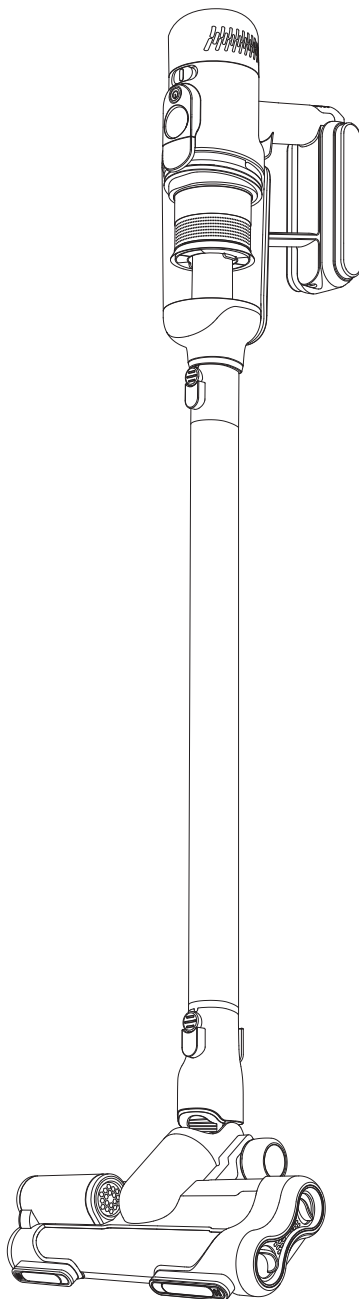

SpeedyLux

Operating Manual

This manual is a general manual for the Speedylux. For the specific configuration of the model you purchased, please refer to the packing list.



CONTENTS:

1. Safety Advices & Cautions	4
2. Product recognition and instructions	5
2.1. Main part	5
2.2. Configuration section	7
2.2.1. Detailed configuration instructions	7
2.2.2. Charging / wall mount installation steps	9
3. Product cleaning and maintenance instructions	10
3.1. Main part cleaning and maintenance	10
3.1.1. Dust Cup Cleaning	10
3.1.2. Charge and discharge maintenance and instructions	11
3.2. Cleaning and maintenance instructions of brush head	13
3.2.1. Motorized double roller brush cleaning and maintenance	13
3.2.2. Electric mite brush cleaning and maintenance	14
4. Analysis and treatment of common faults	14
5. Toxic Chemicals	16



1. Safety Advices & Cautions

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This appliance contains batteries that are only replaceable by skilled persons.

WARNING: For the purposes of recharging the battery, only use the detachable supply YLJX II AY-E350100, ZD024M3501 00EU unit provided with this appliance.

Switch off before cleaning or maintaining the appliance.

1. This machine is not intended for use by persons (including children) with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of machine by a person responsible for their safety.
2. Suitable for dry locations ONLY. Do not use on wet surfaces
3. Do not use to pick up burning or smoking articles (such as cigarettes, matches or hat ashes), ultra-fine particles (such as plaster, gypsum powder, ashes, a mass of flour or toner), sharp objects (including glass, iron nails and pins), chemicals (including acid, dissolvent and detergents), and flammable or combustible liquids (such as gasoline or alcohol).
4. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.
5. Please keep free of anything that may block or damage openings before use, such as large paper balls, sharp objects and anything bigger than the tube, hose or other attachments.
6. Stop using the machine immediately in case of overheat, leakage of electricity, and unusual noise or smell.
7. Please empty the clear bin regularly to avoid reducing airflow which will result in poor suction, overheat and the damage of vacuum cleaner.
8. Please check the extension wand, hose and other attachments regularly to avoid any blockage which may cause poor suction and undesirable performance.
9. Do not clean this vacuum cleaner with lubricant, detergent, or polishes.
10. Contact the customer service department of our company when service or repair is required. Do not disassemble or repair the appliance by yourself.

2. Product recognition and instructions

2.1. Main part

This manual is a general manual for the Speedylux. For the specific configuration of the model you purchased, please refer to the packing list of the model you purchased.

1 HEPA

The air outlet HEPA shelf can be rotated to open, and the air outlet HEPA is built in; it is recommended to clean it every three months.

2 Speed button


Swipe left and right to adjust the suction power. It is set to low gear (long-life mode), automatic gear (the amount of dust is intelligently sensed when the slider is in the middle, and the suction power is automatically adjusted), and high-grade (powerful high suction mode).

3 Switch

Press to turn on the machine and press again to turn it off.

4 OLED screen version

The display contents include: gear status, charging status, real-time power, smart reminder, smart dust sensor, dust full reminder, cleaning reminder, dust cup installation prompt and many other intelligent experiences.

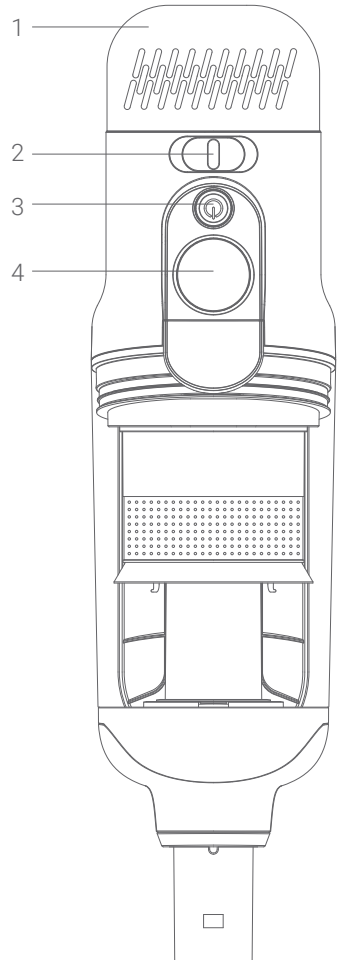

5 Hand grip

When using this product, the anti-static sheet design is embedded in the handheld operation part.

6 Battery

Built-in lithium-ion battery pack, please do not charge, park, or use it near fire, heat sources (such as radiators), or it may be dangerous.

7 Charging jack



Please use the Speedylux power adapter for charging.

8 Dust cup part

The dust cup is installed up and down, with built-in magnets and magnetic installation, convenient and quick. (Refer to Cleanup 3-1)

9 Mouthpiece


Connected to the brush head, can be directly connected to the small brush head and electric mite brush, can also be connected to the metal extension tube to use the electric ground brush.

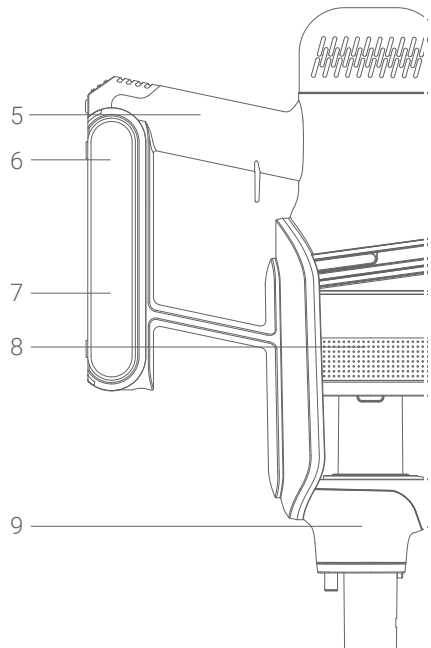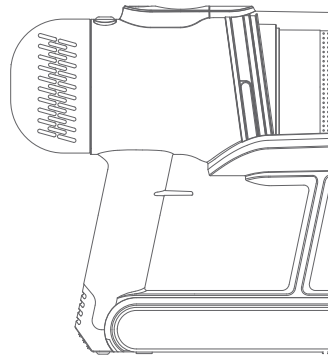

2.2. Configuration section


This manual is a general manual for the Speedylux. For the specific configuration of the model you purchased, please refer to the packing list of the model you purchased.

2.2.1. Detailed configuration instructions

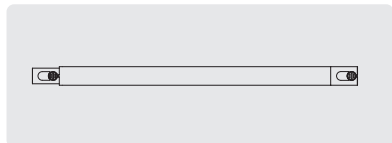


Metal extension tube

Connect the host and the brush head to use

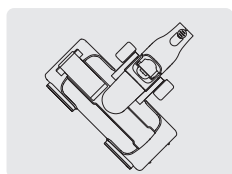


Motorized Double Roller Brush

The electric floor brush is provided with front and rear double roller brushes. The front roller brush is a soft pile roller and the rear roller brush is a carbon fiber bristle roller. It is mainly suitable for cleaning floors, floor tiles, and short-haired carpets.

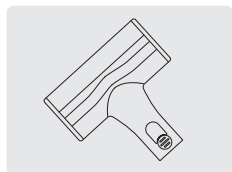

Motorized Mattress Brush


Can be connected to the host for direct use, or it can be connected to a metal extension tube, and then connected to the host for extended use. Mainly suitable for deep cleaning of fabrics and other fabric surfaces such as mattresses, sofas, and car seats.

 Do not use on vulnerable materials (such as silk) to avoid damage.




2-in-1 wide mouth brush

Press the middle button of the brush body to pull out/ retract the bristles. It can be connected to the host for direct use, or it can be connected to the metal extension tube and then connected to the host for extended use. Brush retraction is mainly suitable for cleaning a wide area such as a desktop or a countertop; brush extension is mainly suitable for cleaning the surface of irregular objects such as curtains, keyboards, chandeliers, etc.

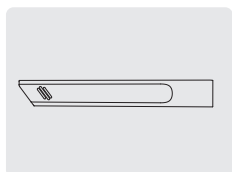


Fiat nozzle

Can be connected to the host for direct use, or it can be connected to a metal extension tube, and then connected to the host for extended use. Mainly suitable for cleaning narrow areas such as gaps and window slots.

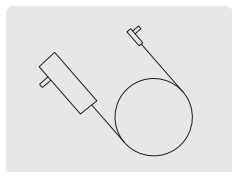

Power Adapter

For charging, connect the household power supply and Speedylux host for charging.

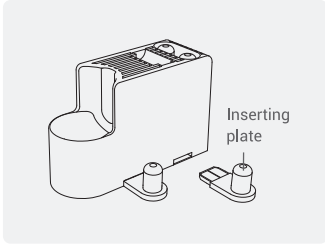


Storage / charging stand

Used to store product configuration and charge the host.

When charging, you need to connect the power adapter to the storage / charging base first, and then place the machine according to the position of the fuselage to charge.

For side storage, insert the charging base plate into the side of the storage base, and then store it.

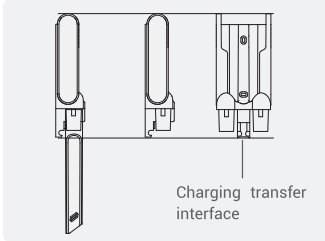


Wall / Charging Stand

It is used for the storage and charging of the host after connecting the straight pipe and the floor brush. The lower end of the wall bracket can be connected to the storage flat nozzle and soft feather brush.

When charging, you need to connect the power adapter to the charging adapter of the wall / charging rack first, and then hang the machine according to the position of the fuselage.

2.2.2. Charging / wall mount installation steps:

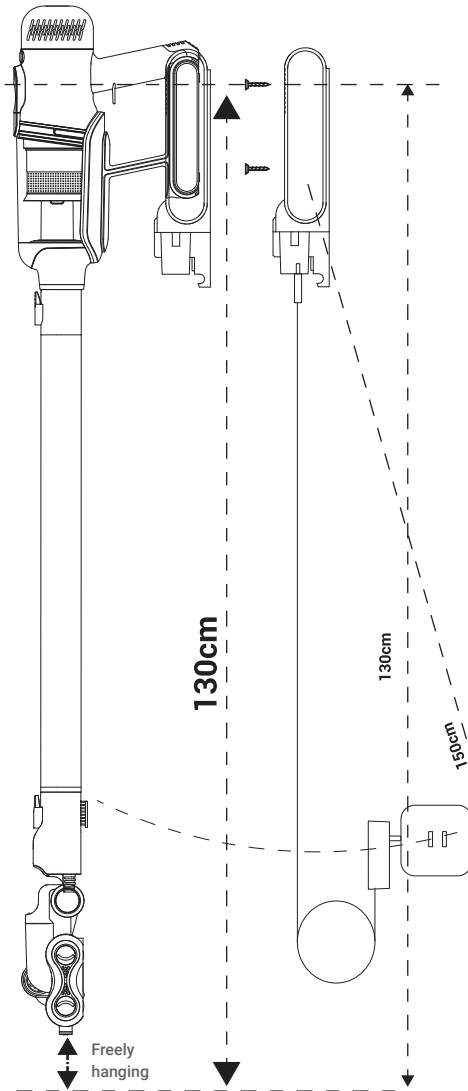

This wall mount requires hole mounting on the wall using expansion screws. Please check your packing list for this configuration and screws.

1. Confirm the punching position: Hold the wall bracket firmly and use the screw holes on the upper part of the wall bracket for positioning. It is recommended to lift off the ground 130cm and confirm the screw holes on the lower part of the wall bracket.

2. Use a hole drill (user-supplied) with a drill bit of 5mm to make holes at the confirmed hole position.

3. Insert the expansion pin into the hole, swing the wall bracket to the corresponding position, and then use a Phillips screwdriver to tighten the screws from the wall bracket hole.

4. Adjust the wall bracket left and right to keep it vertical, then tighten the screws to complete the installation of the wall bracket.

5. Insert the DC plug of the power adapter into the lower slot of the wall mount, rotate and fix it. When charging is needed, the power adapter is connected to the power supply, and the host is naturally placed in the wall mount from top to bottom to charge.


■ Suggestion:

Install the wall / charging rack within 150 cm of the wall socket for convenient charging.


3. Product cleaning and maintenance instructions

3.1. Main part cleaning and maintenance


3.1.1. Dust cup cleaning

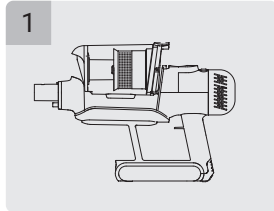


Grasp by hand and lift up the entire dust cup. The magnetic cup is installed between the dust cup and the body.

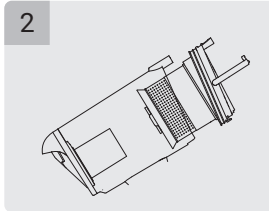


Hold the dust cup firmly, pull the filter handle, and take out the entire filter assembly.

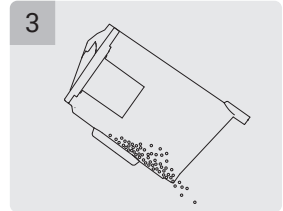


Empty the dust cup.

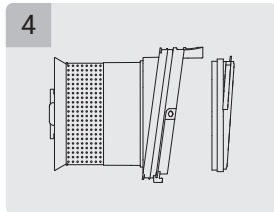

The filter assembly consists of a cyclone filter and an inlet air filter HEPA. The inlet air filter HEPA can be directly removed and cleaned.

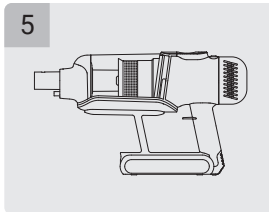

There is a circuit in the fuselage. It is forbidden to wash with water, and it can be gently wiped with a rag.

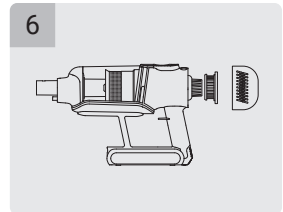

The air outlet HEPA frame can be rotated and removed, and the built-in air outlet HEPA can be directly pulled out for cleaning. The HEPA filter should be cleaned about 3 months.

NOTE:

1. In order to ensure the normal use of the product, please clean and maintain the air filter module once after a period of use (depending on the environment and frequency of product use).


2. The dust cup, cyclone filter, and HEPA filter can be washed with water. After washing, be sure to dry, and keep the filter module completely dry before reusing it. So as not to damage the internal circuit.

It is recommended to replace the inlet filter every six months and the outlet filter every 12 months.

3.1.2. Charge and discharge maintenance and instructions


Charging introduction

1. This product is not fully charged to ensure transportation safety when it leaves the factory. When you receive the product, it is recommended to use it normally after 4 hours of first charging.
2. This product will automatically cut off the power for protection after being fully charged, and the charging display will be turned off after about 10 seconds of full power display to protect the indoor light environment without generating light pollution.
3. There are three kinds of charging methods for this series of products. Choose your charging method according to the packing list configuration of the purchased product.

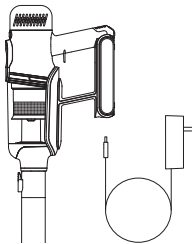


In-line charging

Connect the power adapter to a household power supply, and insert the DC plug into the host's charging connector.

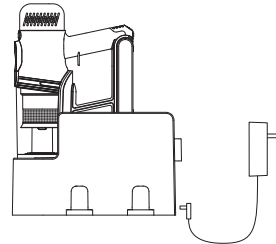

Storage type charging

Connect the power adapter to the household power supply, insert the DC plug into the charging port of the storage base, and the host can be charged by putting it into the corresponding slot of the storage base.

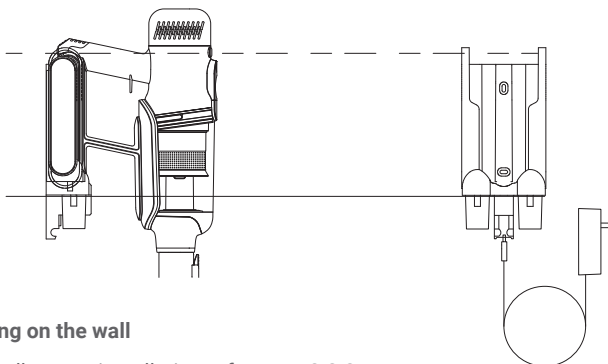


Try charging on the wall

Charge / wall mount installation reference. 2.2.2.

Insert the DC plug of the power adapter into the charging / wall mount charging interface card slot, rotate and fix it, and then connect the power adapter to a household power supply. When the host is placed in the charging / wall mount, it can be charged.

Charging Introduction

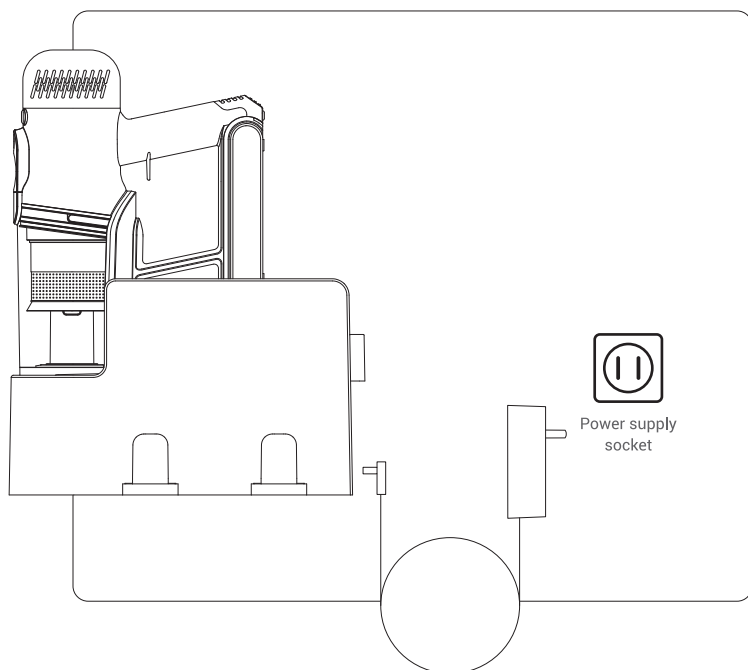


Note:

1. After fully charged, if you do not use the vacuum cleaner for a long time, please unplug the power adapter.
2. Do not install the charging / storage stand in a place exposed to direct sunlight or high temperature to charge the vacuum cleaner. Please charge at a room between +5 and +36°C temperature to avoid danger during charging.
3. Place the vacuum cleaner on the charging / storage base, the product will automatically stop running and switch to charging mode.
4. During the charging process, the temperature of the host and the power adapter will rise. This is normal and not abnormal.
5. Charging time and usage time will change due to the influence of the product's own temperature.
6. During charging (not fully charged), the host can be removed for use, but it will take less time than fully charged.
7. Do not use the power adapter plug or power cord if it is damaged.
8. This product can only be charged with the original power adapter in the package. Using other power adapters will cause damage to the product.

3.2 Cleaning and maintenance instructions of brush head

This manual is a general manual for the Speedylux. For the specific configuration of the model you purchased, please refer to the packing list of the model you purchased.


3.2.1 Motorized double roller brush cleaning and maintenance

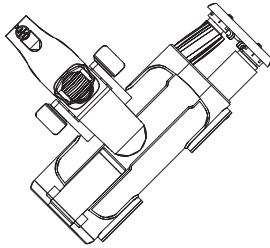

The Motorized double roller brush can be cleaned by pulling out the roller brush shaft at the side, using the thumb and index finger.

Press the two buttons on the side cover from the outside to the inside, and then pull out the roller brush body. When installing, flip the floor brush with the bottom of the floor brush facing up and insert the double roller brush. Press back on the end cap, the buckle will rebound and fasten automatically.


The roller brush is divided into soft velvet roller brush and carbon fiber roller brush. Take off the end cap, there is a slot between the roller brush body and the end cap, just turn to the corresponding position, install or remove the roller brush.

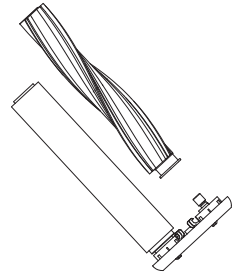

⚠ Note:

The soft velvet roller brush is placed on the front of the floor brush during installation, and washing with water is not recommended.


Not easy to dry. The carbon fiber roller brush body can be washed with water. After drying, it can be installed and used at the same time as the soft velvet roller brush.

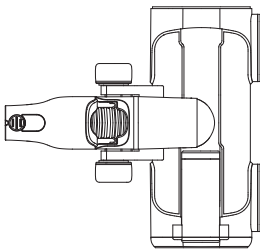

The post circuit of the motorized double roller is inside the cavity. Washing is strictly prohibited. Wipe gently with a rag.

3.2.2 Electric mite brush cleaning and maintenance

1. Pull the unlock button in the direction of the arrow and rotate the mite brush side cover at the same time.
2. Pull the roller brush out of the mite brush (note: some dust will come out when it is pulled out).
3. Tear off the tangled hair, animal hair or debris from the roller brush, and remove the dust.
4. Reverse the operation, reinstall the roller brush into the brush body and make sure it is in place (a "click" sound will be heard when it is in place).

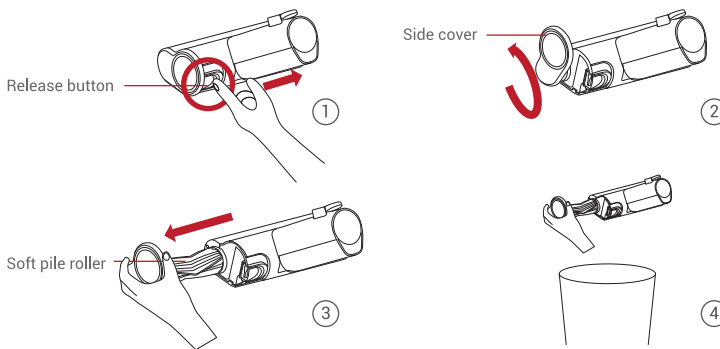

4. Analysis and treatment of common faults

This manual is a general manual for the Speedylux series. For the specific configuration of the model you purchased, please refer to the packing list of the model you purchased.

Error/Fault	Possible Cause	Remedy
Vacuum is not working	<ol style="list-style-type: none">1. Battery is empty2. Any part is blocked	<ol style="list-style-type: none">1. Fully recharge2. Locate and clean the blockages
Reduced Suction	<ol style="list-style-type: none">1. Clear bin and filter units are overfilled2. Brush head is blocked	<ol style="list-style-type: none">1. Empty the clear bin and wash the filter units2. Clean the brush head
Unusual Noises	The brush roller is blocked	<ol style="list-style-type: none">1. Locate and clean the blockages2. Contact customer service

OLED display failure description

Error/Fault	Possible Cause	Remedy
The bottom left corner of the display shows a charging failure	Charging ambient temperature is too high or too low	Please move the product to the environment temperature 0 ~ 45°C for charging.
The bottom left corner of the display shows the charging failure, and the screen is blank after 2 seconds	<ol style="list-style-type: none">1. Not using original power adapter2. In a high or low temperature environment	<ol style="list-style-type: none">1. Please use the original power adapter for charging2. Please move the product to the ambient temperature of 0 ~ 45°C for charging.
Black screen	<ol style="list-style-type: none">1. Run out of power2. In a high or low temperature environment	<ol style="list-style-type: none">1. Please use the original power adapter for charging2. Please move this product to an environment with an ambient temperature of 0 ~ 45°C.
The display shows the ground brush is stalled	Floor brush blocked or stuck	Reuse after cleaning the floor brush
The display shows that the dust cup is installed before use	No dust cup installed	Please install the dust cup before using it

If the above is not resolved, please contact the LUX after-sales.

5. Toxic Chemicals

Part Name	Toxic or harmful substances or elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (CrVI)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Plastic	0	0	0	0	0	0
Electric machinery	0	0	0	0	0	0
Circuit board	X	0	0	0	0	0
Cable line	0	0	0	0	0	0
Metal parts	X	0	0	0	0	0
Battery	0	0	0	0	0	0

This form has been prepared in accordance with the provisions of SJ/T 11364.

0: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in 2011/65/EU, 2015/863/EU.

X: Indicates that the hazardous substance is at least in a homogeneous material of the part exceeding the limit specified in 2011/65/EU, 2015/863/EU.



The production level meets RoHS environmental protection requirements, and the hazardous substances contained in some components cannot be replaced under the current international technical standards. All environmentally friendly use periods of this product refer to the safe period of time during which the hazardous substances or elements contained in the product will not leak.

NOTE:



This product has a built-in lithium battery. When disposing of this product, do not disassemble the battery and other household garbage together to avoid polluting the environment.

Please take it to a designated recycler or professional.

ENG

LUX INTERNATIONAL AG
NEUE WINTERHURERSTRASSE 30
CH-8304 WALLISELLEN / ZÜRICH
SWITZERLAND
Tel: +41 41 768 88 88
E-MAIL: CONTACT@LUXINTERNATIONAL.COM
WWW.LUXINTERNATIONAL.COM

AT

LUX ÖSTERREICH GMBH
CONCORDE BUSINESS PARK 1/B3/31
2320 SCHWECHAT, ÖSTERREICH
TEL.: +43 (1) 706 42 52
E-MAIL: OESTERREICH@LUXAUSTRIA.AT
WWW.LUXINTERNATIONAL.COM/AT

CH

LUX GENERALVERTRETUNG SCHWEIZ
VERTRETEN DURCH:
JSK MARKETING GMBH
BAUMGARTENSTRASSE 331
CH-4715 HERBETSWIL (SO)
TEL: +41 (62) 557 12 69
E-MAIL: JSK-MARKETING@BLUEWIN.CH

CZ

LUX CZECH S.R.O.
PODĚBRADSKÁ 786/65A
198 00, PRAHA 9 – HLOUBĚTÍN
TEL: +420 220 000 871
E-MAIL: INFO@LUXCZECH.CZ
WWW.LUXCZECH.CZ

DE

ALLCLEAN REINIGUNGS- UND
UMWELT-TECHNIK GMBH
STEINBERGSTRASSE 3
04288 LEIPZIG
+49 (0) 34297 609 610
E-MAIL: INFO@ALLCLEAN.DE
WWW.LUXINTERNATIONAL.COM/DE

ES

LUX WELITY SPAIN SL
CALLE PEZ VOLADOR 32, BAJO C
ES - 28007 MADRID
TEL: 91 557 1128
WWW.LUX.ES

FI

L&D DIRECT OY
MERIVIRTA 9; 02320 ESPOO'
FINLAND
TEL: 0207638399
E-MAIL: ASIAKASPALVELU@LUXKOTI.FI
WWW.LUXKOTI.FI

FR

LUX FRANCE
36 RUE DE LA GARE D'IVOY
F-18380 IVOY LE PRE
TEL: 02 4858 0455
WWW.FRANCE-PURIFICATION.COM

IT

DES SRL
VIA PERUGINO 10
24068 SERIATE (BG) • ITALIA
TEL: 800 098 436
E-MAIL: INFO@DES-LUX.IT
WWW.VIVERESANO.EU

HU

LUX HUNGÁRIA KERESKEDELMI KFT.
JÁVOR UTCA 5/A.
1145 BUDAPEST
MAGYARORSZÁG
TEL: +36 1 422 4444
E-MAIL: INFO@LUXHUNGARIA.HU
WWW.LUXHUNGARIA.HU

NO

LUX NORGE AS
KNIVEVEIEN 29
NO-3036 DRAMMEN
TEL. (+47) 22 74 99 90
E-MAIL: POST@LUX.NO
WWW.LUXINTERNATIONAL.COM

PL

LUX WELITY POLSKA SP. Z O.O.
MIĘDZYBORSKA 27A
PL-60-162 POZNAŃ
+48 61 22 177 99
E-MAIL: BIURO@LUXPOLSKA.PL
WWW.LUXWELITY.PL